

Virtual Device-L



ZEBRA

User Guide

© 2018 ZIH Corp. All rights reserved. ZEBRA and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

Information in this document is subject to change without notice.

For further information regarding legal and proprietary statements, please go to:

COPYRIGHTS: www.zebra.com/copyright

WARRANTY: www.zebra.com/warranty

END USER LICENSE AGREEMENT: www.zebra.com/eula

SOFTWARE: www.zebra.com/linkoslegal

Terms of Use

Proprietary Statement This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries (“Zebra Technologies”). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Contents

Contents	3
Introduction	5
Overview	6
Virtual Device-L Features	6
Supported Printers	7
Configuring Network Connectivity	7
Notes	8
Install, Register, and Enable Virtual Device-L	9
Acquiring the Virtual Device Application	10
Downloading the Virtual Device-L Application	11
Adding Printers to the ZDownloader List	11
Modifying Printers in the List	16
Deleting Printers from the List	17
Downloading the Virtual Device App to Selected Printers	18
Canceling a Download in Progress	20
Registering the Virtual Device	21
ZDownloader Log File	21
Enabling the Virtual Device	22
Using an SGD Command	22
Using the User Menus	22
Commands	33
Table of Supported Commands	34
Set/Get/Do (SGD) Commands	41
apl.enable	41
apl.version	41
apl.framework_version	42

Supported Fonts	43
ZDownloader Utility	55
Downloading the ZDownloader Utility	56
Installing the ZDownloader Utility	57
Index	60

Introduction

This section describes the features and functions of a Zebra printer that is running the Virtual Device-L application.

Contents

Overview	6
Virtual Device-L Features.	6
Virtual Device-L Features.	6
Configuring Network Connectivity	7
Notes	8

Overview

The Virtual Device-L application enables Zebra mobile and tabletop printers to work with many host systems that are using Labelpoint® printers. In most cases, no changes will be required to the host application. This feature can help customers to make a smooth transition to Zebra printers and save them the time and expense of having to rewrite their host software.

Virtual Device-L Features

The Virtual Device-L application:

- Uses existing features of Zebra printers, when available.
- Supports the Bluetooth®, Serial, Ethernet, WLAN, and USB interfaces.
- Offers many outline fonts, barcodes, and specific commands and features of target printer models (see [Supported Fonts on page 43](#)).
- Provides support of Labelpoint commands (see [Commands on page 33](#)).

Supported Printers

This manual describes the Virtual Device-L language for Zebra mobile and tabletop printers and should be used by any person who needs to support that language on one of the following Zebra printers:

Printer	Firmware
iMZ Series	V73.19.6Z and later
QLn Series	V68.19.6Z and later
ZT200 Series	V72.19.6Z and later
ZT400 Series	V75.19.7Z and later
ZT510	V80.20.02Z and later
ZT600 Series	V80.20.02Z and later
ZD400 Series	V77.19.14Z or V84.20.05Z and later
ZD500 Series	V74.19.6Z and later
ZD600 Series	V84.20.05Z and later
ZQ300 Series	V81.20.06Z and later
ZQ500 Series	V76.19.10Z and later



Note • The Virtual Device-L language is supported only on 203 dpi printers.

For complete printer operation, use this manual in combination with the User Guide for your printer.

Configuring Network Connectivity

Your printer may be equipped with one or more of the following interfaces:

- Bluetooth—For detailed information to connect a Bluetooth device, refer to the *Bluetooth User Guide*.
- Wired print server—For detailed information, refer to the *ZebraNet Wired and Wireless Print Servers User Guide*.
- Wireless print server (a/b/g/n)—For detailed information, refer to the *ZebraNet Wired and Wireless Print Servers User Guide*.

For other connectivity options, refer to the User Guide for your printer. Copies of these manuals are available at <http://www.zebra.com/manuals>.

Notes

- Other command languages are disabled when running Virtual Device-L. However, Set/Get/Do (SGD) commands and file download all operate properly with Virtual Device-L enabled.
- Virtual Device-L fonts can only be used with Virtual Device-L commands. They cannot be used with other languages.
- The Virtual Device-L mode application will not respond to CPCL, ZPL, or EPL commands. Instead, commands will be processed by the Virtual Device-L application.

Install, Register, and Enable Virtual Device-L

This section provides you with instructions on how to install and enable the Virtual Device-L application on one or more Zebra printers.

Contents

Acquiring the Virtual Device Application	10
Downloading the Virtual Device-L Application	11
Using ZDownloader	11
Adding Printers to the ZDownloader List	11
Auto-Detect Printers	12
Manually Add Printers	13
Modifying Printers in the List	17
Deleting Printers from the List	18
Downloading the Virtual Device App to Selected Printers	19
Registering the Virtual Device	22
Enabling the Virtual Device	23
Using an SGD Command	23
Using the User Menu	23
QLn420 Printers	24
QLn320 and QLn220 Printers	27
ZT230, ZT400 Series, ZT510, ZT600 Series, ZD500 Series, and ZD600 Series Printers	30

Acquiring the Virtual Device Application

To get the Virtual Device app, perform the following from your computer:

1. Open a web browser and navigate to <http://www.zebra.com/virtualdevices>.
2. Locate your printer type in the list of printers, and then click **Download Now**.
3. Fill out the information on the Virtual Device Download Request form.
4. Click **Submit**.
5. Read the End User License Agreement.
6. Click **Accept and Begin Download Now**.
Your browser prompts you to open or save the archive containing the Virtual Device app.
7. Save and store the Virtual Device app archive file to your computer.
The archive file contains the following:
 - The Virtual Device `.NRD` file to be downloaded to a Zebra printer.
 - A `.txt` file that contains the SGD command for immediately activating the Virtual Device app.
8. Extract the files from the archive to your computer.

Downloading the Virtual Device-L Application


Zebra provides two options to download the Virtual Device-L app to the printer.

- On a computer with the ZDownloader Utility
The ZDownloader Utility is the only method shown in this manual. For instructions on how to download and install the ZDownloader Utility, see [ZDownloader Utility on page 55](#).
- On an Android device with the Zebra Printer Setup Utility for Android Devices (available for free on Google Play™)
For information on using the Zebra Printer Setup Utility for Android Devices and to download the user guide, navigate to www.zebra.com/setup.

Using ZDownloader

The ZDownloader application can update Virtual Device-L files in Zebra printers connected by Serial, Parallel, USB, and IP Ethernet networks.

Figure 1 • Initial ZDownloader Screen

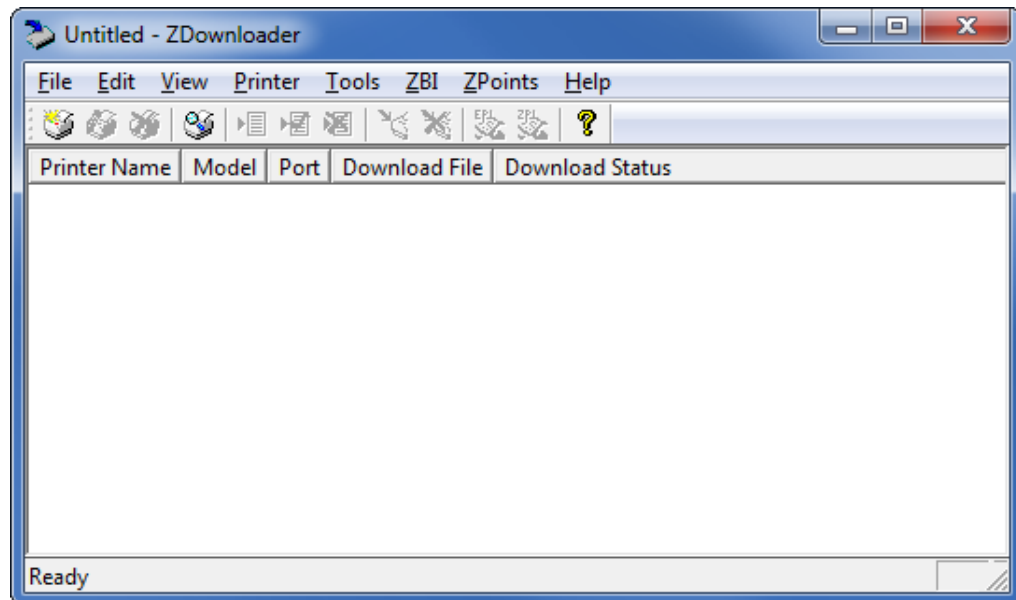

Adding Printers to the ZDownloader List

There are two ways to add printers to the list:

- Auto-Detect (use for USB or IP Ethernet interfaces)
- Manual add (use for Serial, Parallel, or IP Ethernet interfaces)

If your printer is connecting via the serial or parallel interfaces, or is not detected by using the Auto-Detect method, use the Manual Add method.


Auto-Detect Printers

Use Auto-Detect for USB or IP Ethernet interfaces.




Note • Ethernet connected printers are detected by the application broadcasting a UDP packet out onto the network. UDP port number 4201 is used for the discovery process. Some networks filter out UDP packets. This means that the ZDownloader utility may not be able to detect all of the printers on your network. See your network administrator for more information. If you are not able to Auto-Detect your network printers, follow instructions for manually adding a printer.

USB printers can only be added by using Auto-Detect. The ZDownloader utility can support as many USB printers as your computer can support (most computers typically can support up to 255).

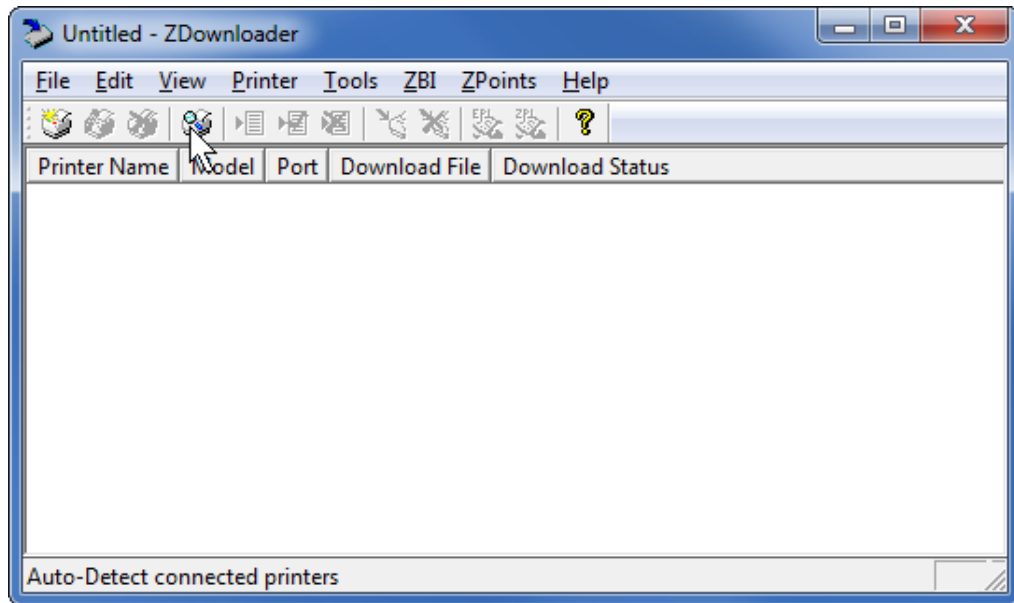

To Auto-Detect printers connected via the USB or IP Ethernet interfaces, perform the following steps:


1. In the ZDownloader toolbar, select **Printer > Auto-Detect**.
 OR
 Right-click in the ZDownloader window and select **Auto-Detect Printers**.
 The printers detected are added to the printer list.

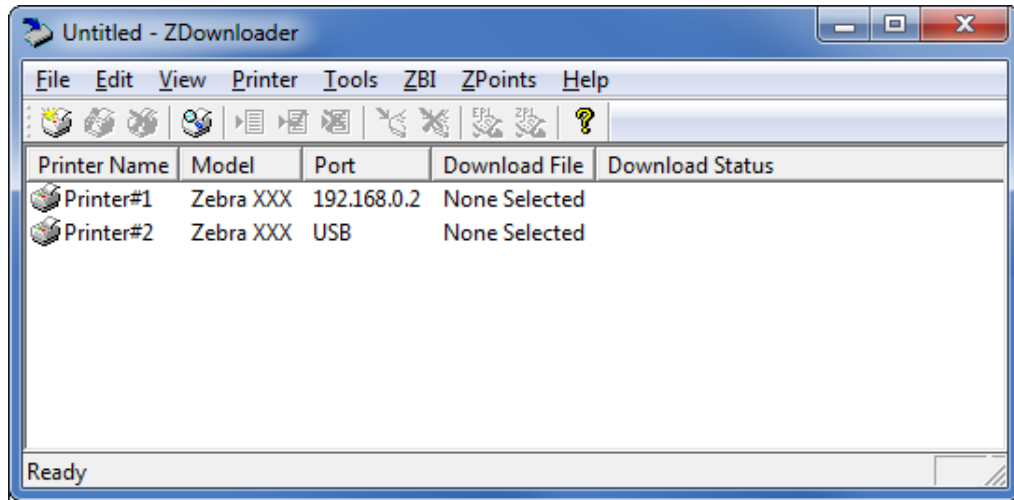

Manually Add Printers

To manually add printers connected via the Serial, Parallel, or Network interfaces, perform the following steps:

1. In the ZDownloader toolbar, select **Printer > Add....**
 OR
 Right-click in the ZDownloader window and select **Add Printer....**
 The following window appears.

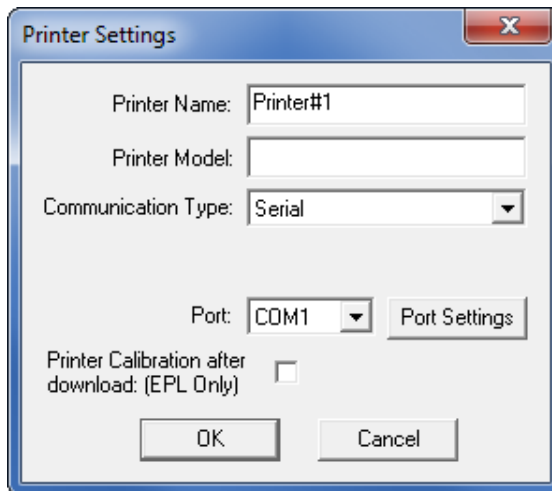


2. Add a printer name and your printer model in the appropriate fields.
3. What type of printer are you adding?

If you are adding a...	Then...
Serial Printer	Go to Adding a Serial Printer.
Parallel Printer	Go to Adding a Parallel Printer on page 16.
Network Printer	Go to Adding a Network Printer on page 17.


Adding a Serial Printer

4. Select the serial port to which the printer is connected.

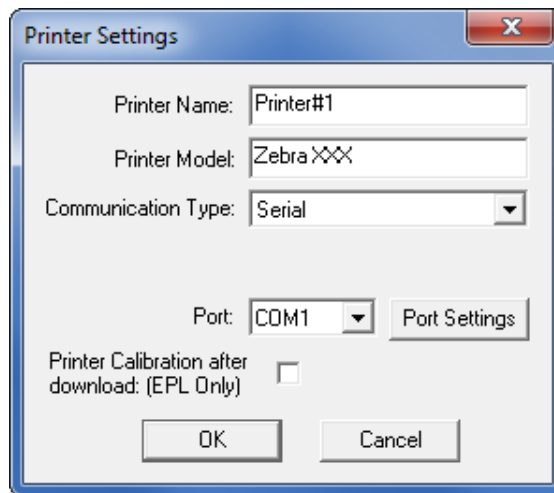

5. Click **Port Settings**.

The following window appears.

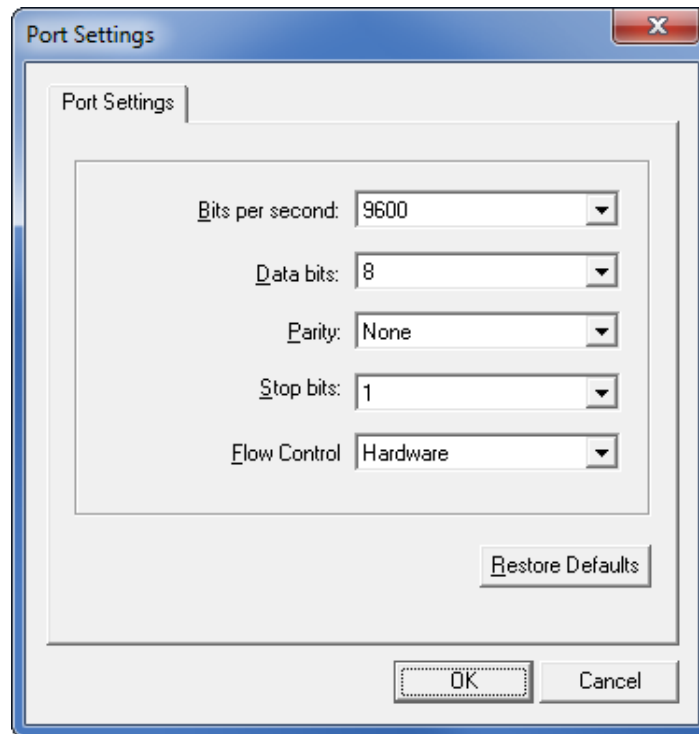


6. Adjust the settings as necessary. The printer's serial port settings must match the computer's serial port settings. For more information about the settings, refer to the User Guide for your printer.
7. Click **OK** to save the port settings.
8. Click **OK** to add the printer.

Adding a Parallel Printer

9. Set Communication Type to Parallel.

The available parallel ports will be shown in the Port drop-down box.

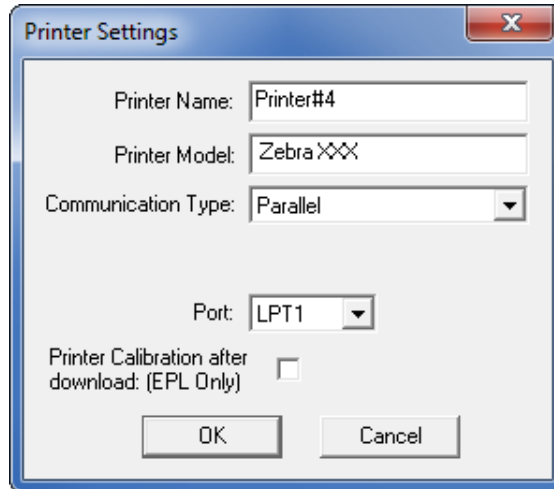


10. Select the port to which the printer is connected. No additional configuration is necessary.

11. Click **OK** to add the printer.

Adding a Network Printer

12. Set **Communication Type** to **Network**.

The following window appears.

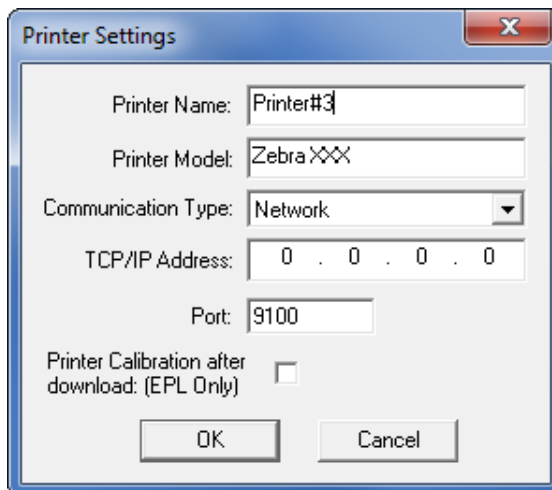


13. Enter the printer's IP address.
14. Click **OK** to save the network settings.
15. Click **OK** to add the printer.


Modifying Printers in the List

To change printer settings for a printer in the list, perform the following steps:

1. Select the printer to modify.

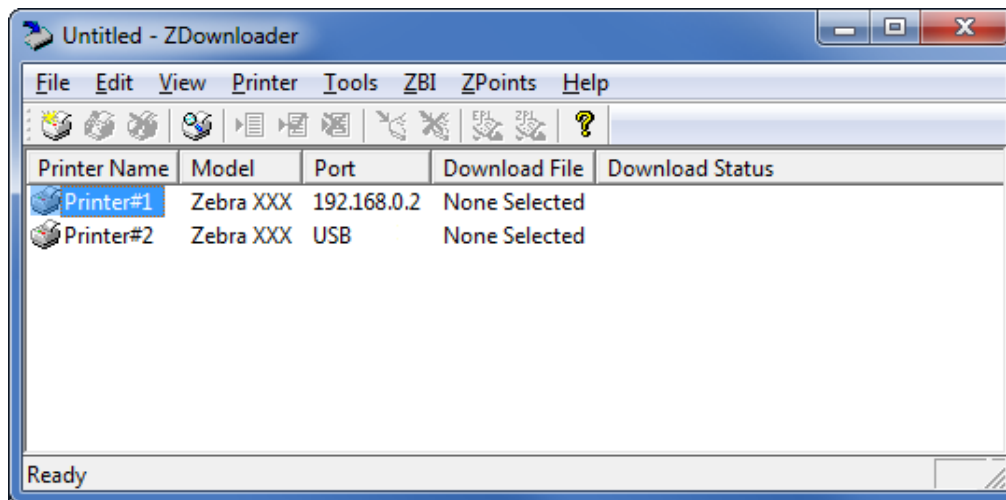

2. In the toolbar, select **Printer > Modify Printer....**
OR
Right-click on the printer and select **Modify Printer....**
The printer settings for the selected printer are displayed.

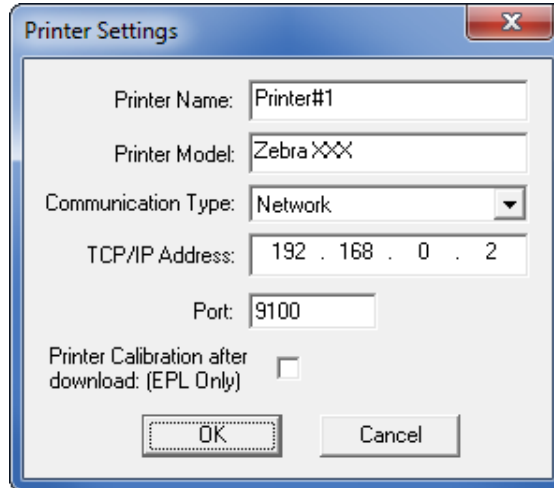


3. Modify the settings as desired.
4. Click **OK** to save the settings.


Deleting Printers from the List

To delete printers from the list, perform the following steps:

1. Select one or more printers to delete.

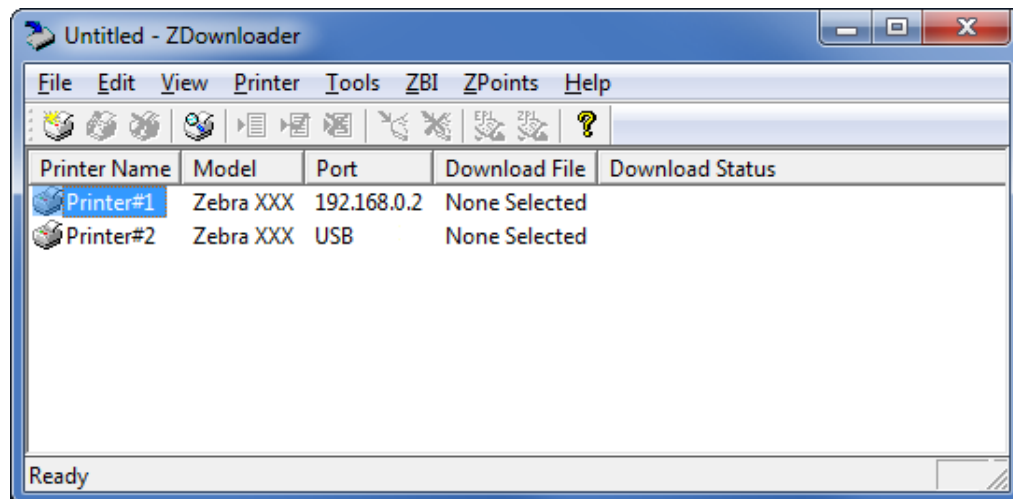

- In the toolbar, select **Printer > Delete**.
 OR
 Right-click on one of the selected printers and select **Delete Printer(s)**.
 The printer is removed from the list.

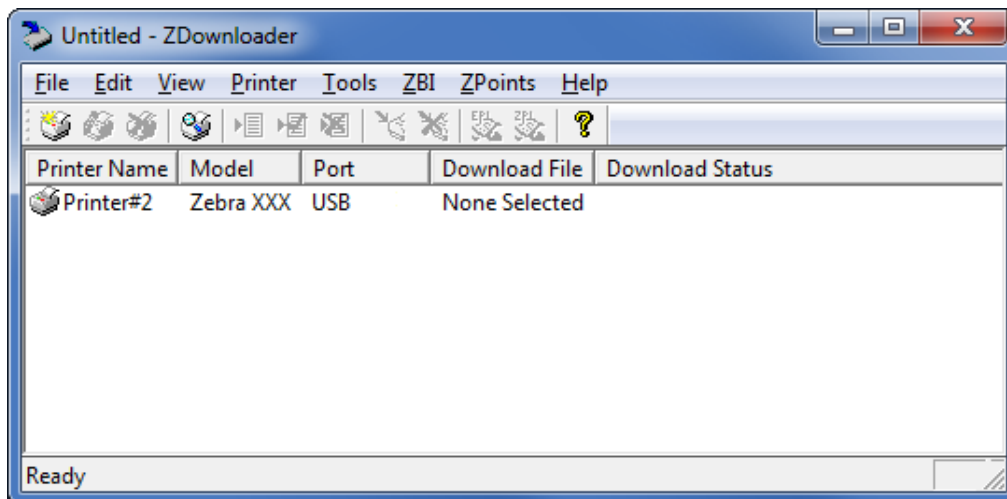

Downloading the Virtual Device App to Selected Printers


To download the Virtual Device-L app to your printer(s), you must select the file to send to each printer. ZDownloader, by default, downloads files to one printer at a time. If you have multiple printers to update and want to speed up the process, you can increase the number of simultaneous downloads.



Note • More simultaneous downloads require more of your computer resources. Some computers may slow down with simultaneous downloads or as more printers are added for simultaneous downloading.

To allow simultaneous downloads, perform the following step:


- Click **Tools > Options...**
 The following prompt appears.

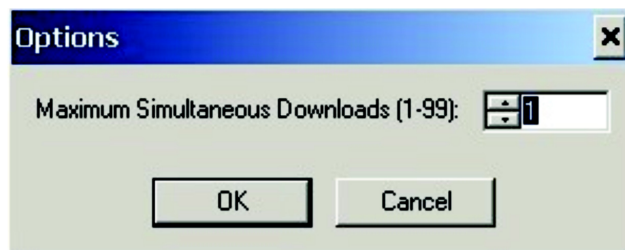


- Raise the number shown to allow multiple simultaneous downloads.
- Click **OK**.

To download the Virtual Device app file to one or more printers, perform the following steps:

1. Select the printers to which you want to download the Virtual Device-L app file. To select multiple printers, hold down the Ctrl or Shift key, and then click on the desired printers.

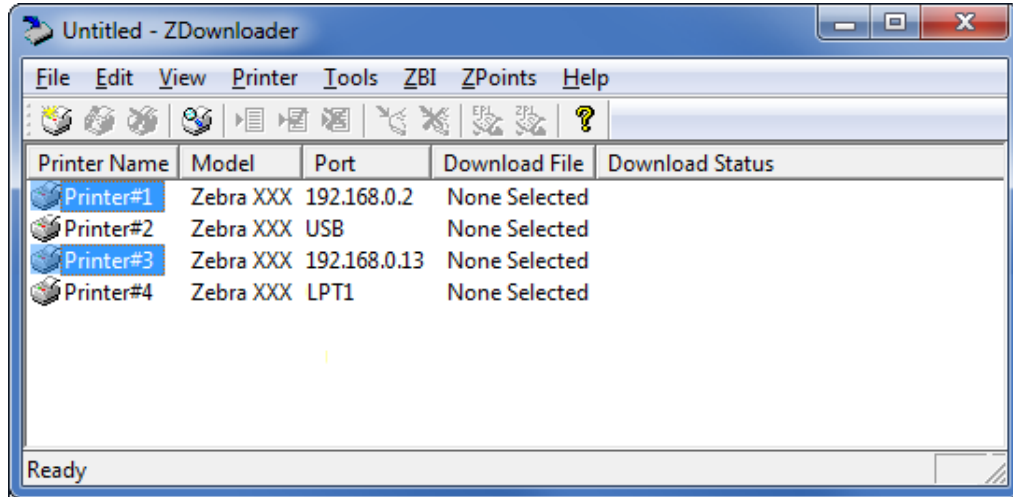

2. In the toolbar, select **File > Select Firmware File....**
OR
Right-click on one of the selected printers and select **Select Firmware File....**
3. Navigate to the Virtual Device app file that you acquired previously.
4. Click Open.
The file that you selected appears under Download File for the selected printers. Printers that are present in the list but that do not have a file selected will be ignored when Downloading starts.

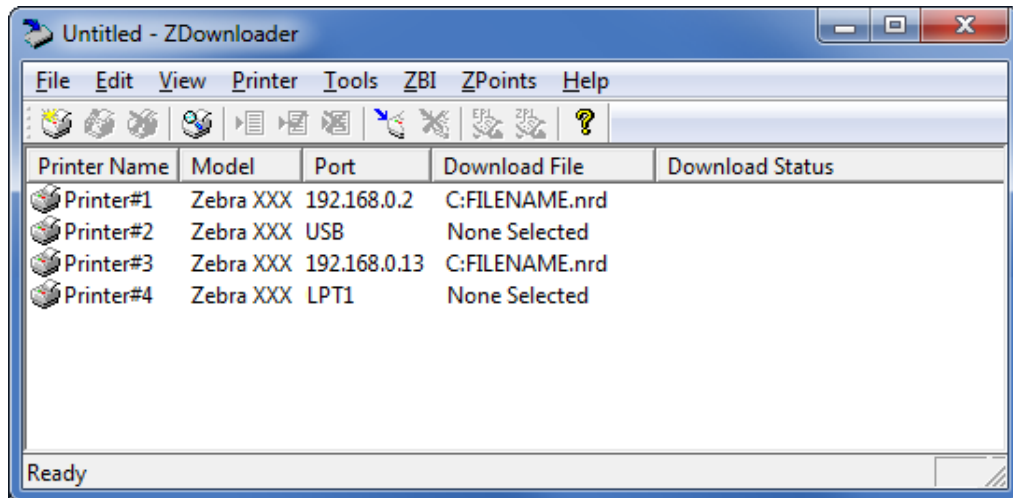

5. Start the download process by doing one of the following:
 - Select **Printer > Download to Selected**.
 - Select the printer(s) of interest and select the **Printer** and then select **Download To Selected**.
6. In the toolbar, select **Printer > Download All**.

OR

Right-click in the ZDownloader window and select **Download All**.

After downloading has begun, the progress of each printer will be shown in the Download Status column.



Canceling a Download in Progress

The Cancel Download toolbar button and the Printer > Cancel Download menu options become active when the files are downloading.

To cancel downloading to ALL printers in the list, perform the following step:

1. Click **Printer > Cancel Download**.

OR

Right-click in the ZDownloader window and select **Cancel Download**.

To cancel downloading to SPECIFIC printers in the list, perform the following step:

1. Select one or more printers with a download in progress.
2. Click **Printer > Cancel Download**.

OR

Right-click on a selected printer and select **Cancel Download**.

Registering the Virtual Device

ZDownloader maintains a log file of all items downloaded to a Zebra printer along with the printer serial number. You can register your Virtual Device installation with Zebra Repair and Tech Support to ensure that a printer sent in for repair is returned with the Virtual Device installed, and when engaging Zebra Tech Support, they will have records of the item being loaded. To register your Virtual Device installation, you must send the log file created by ZDownloader to the Zebra log file management group.

ZDownloader Log File

To send the log file, complete these steps:

1. Based on your operating system, navigate to the appropriate folder:
 - Microsoft® Windows® XP
`C:\Program Files\Common Files\FirmwareDownloader`
 - Microsoft Windows 7, Windows 8, and Windows 10
`C:\ProgramData\Zebra Technologies\Firmware Downloader and ZBI Key Manager`
2. Copy the log file (`DownloadLog.txt`), and email to Zdownloader@zebra.com.
If you are downloading from several computers, you need to send the log file from each computer. If you download files to printers on one day and do not send the file the same day, please note this in your email so that the log file management group picks up the previous load detail. Otherwise, they only pick up the load data for the day that the log file is sent.

Enabling the Virtual Device

You can enable Virtual Device-L by sending a Set/Get/Do (SGD) command to the printer or by selecting the option through the printer's menus.

Using an SGD Command

To enable Virtual Device-L on your printer, send the following command:

```
! U1 setvar "apl.enable" "apl-1"
```

To disable Virtual Devices on your printer and return to normal function, send the following command:

```
! U1 setvar "apl.enable" "none"
```

You must restart the printer after changing the value of `apl.enable`. For more information about this SGD command, see [apl.enable on page 41](#).

Using the User Menus

This section includes instructions for the following printers:

- [QLn420 Printers on page 24](#)
- [QLn320 and QLn220 Printers on page 27](#)
- [ZT230, ZT400 Series, ZT510, ZT600 Series, ZD500 Series, and ZD600 Series Printers on page 30](#)


If necessary, refer to the User Guide for your printer for additional information about your printer's control panel.

QLn420 Printers


1. From the printer's idle display screen, press the **LEFT SOFT KEY** to select the Home icon.




The printer displays the Home Menu.

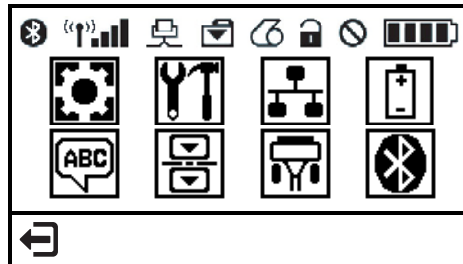

2. Use the **ARROWS** to navigate to the **LANGUAGE** menu.

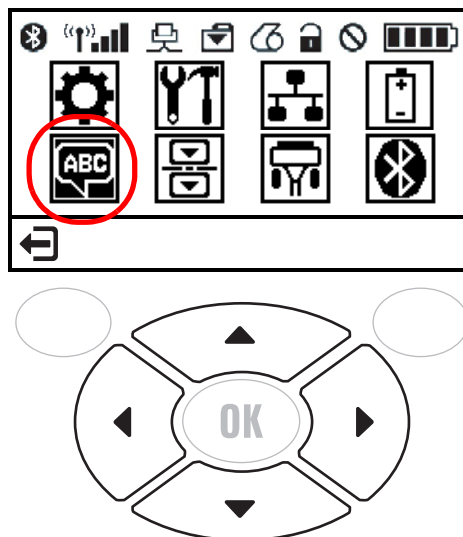



3. Press the **OK** button.

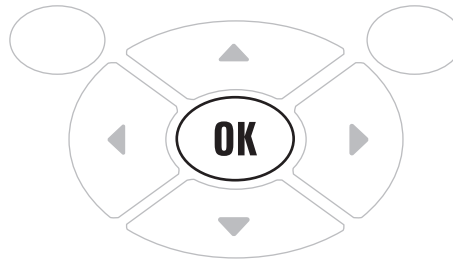



The printer displays the **LANGUAGE** selection screen.




4. Use the **LEFT** or **RIGHT ARROW** to navigate to the **VIRTUAL DEVICE** selection screen.

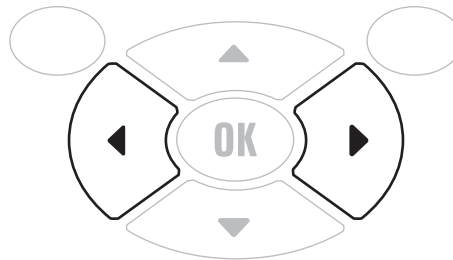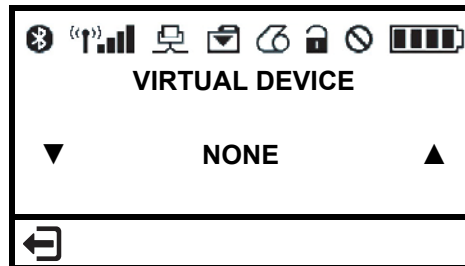

5. Use the **UP** or **DOWN ARROW** to scroll to the **APL-L** option.

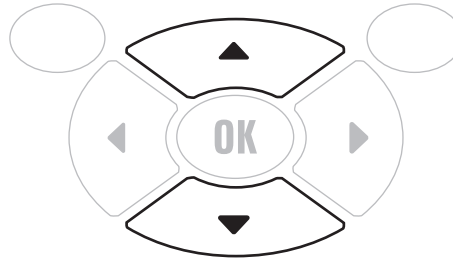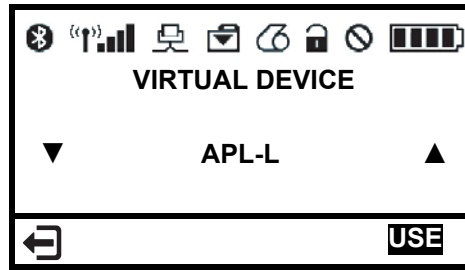


6. Press the **RIGHT SOFT KEY** to select **USE**.

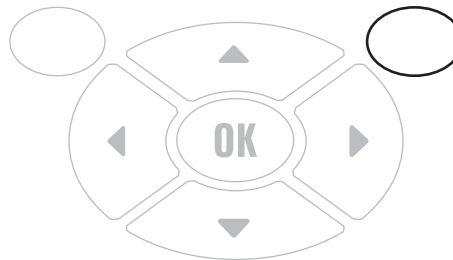


The printer restarts and uses the Virtual Device that you selected.

QLn320 and QLn220 Printers


1. From the printer's idle display screen, press the **LEFT SOFT KEY** to select the Home icon.

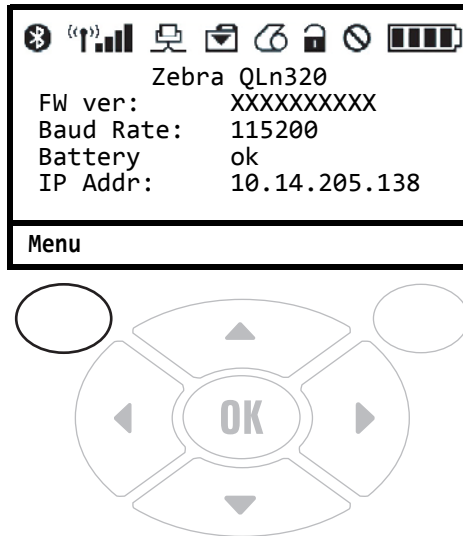


The printer displays the Home Menu.

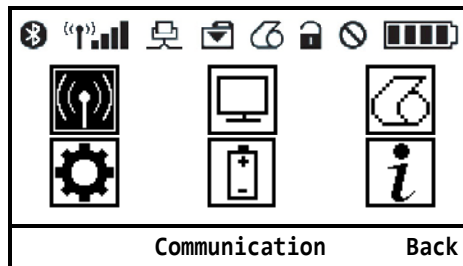


2. Use the **ARROWS** to navigate to the **SETTINGS** menu.

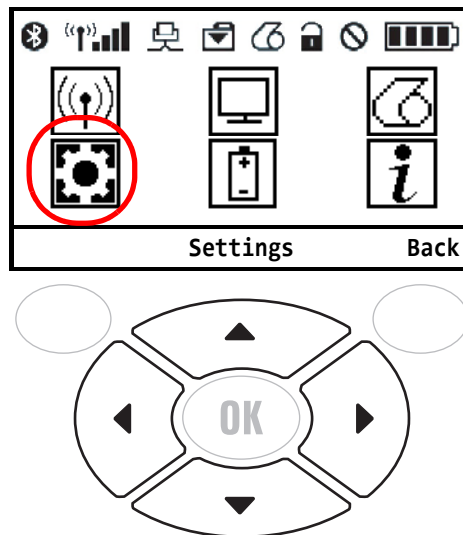


3. Press the **OK** button.

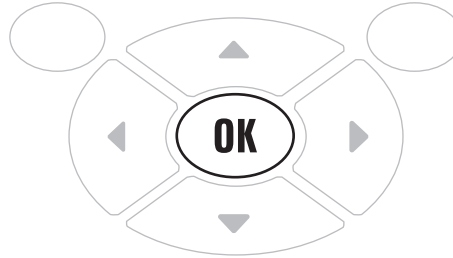



The printer displays the **VIRTUAL DEVICE** selection screen.

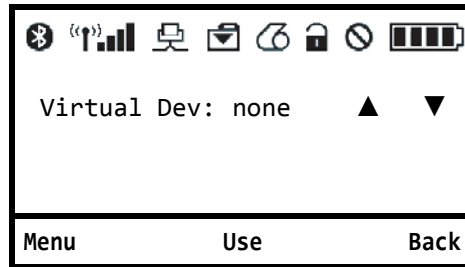


4. Press the **RIGHT ARROW** to highlight the up arrow on the display.

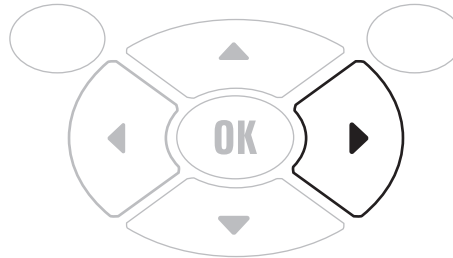


5. With the up arrow highlighted, press the **OK** button until you scroll to the **APL-L** option.

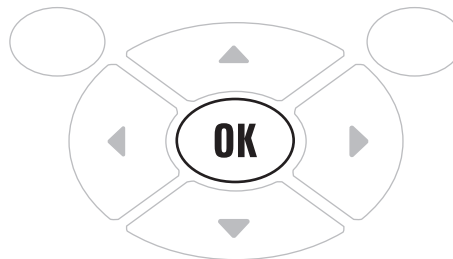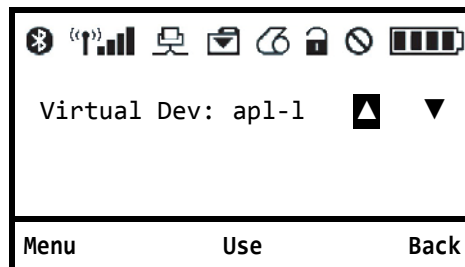

6. Press the **LEFT ARROW** to highlight **APL-L**

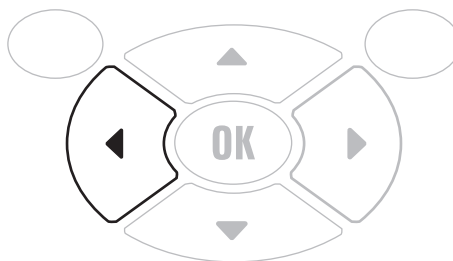

7. Press **OK** to select **USE**.

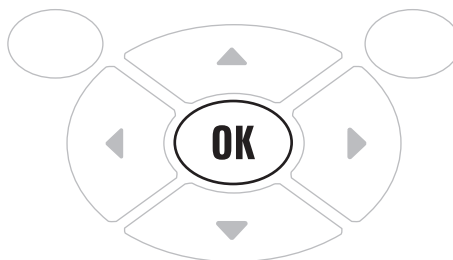

The printer restarts and uses the Virtual Device that you selected.

ZT230, ZT400 Series, ZT510, ZT600 Series, ZD500 Series, and ZD600 Series Printers




Note • The ZT230 control panel is shown in this procedure. The control panel for the other printers is similar.


1. From the printer's idle display screen, press the **LEFT SELECT KEY** to select the Home icon.




The printer displays the Home Menu.

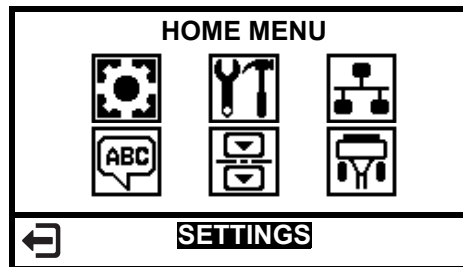

2. Use the **ARROWS** to navigate to the **LANGUAGE** menu.

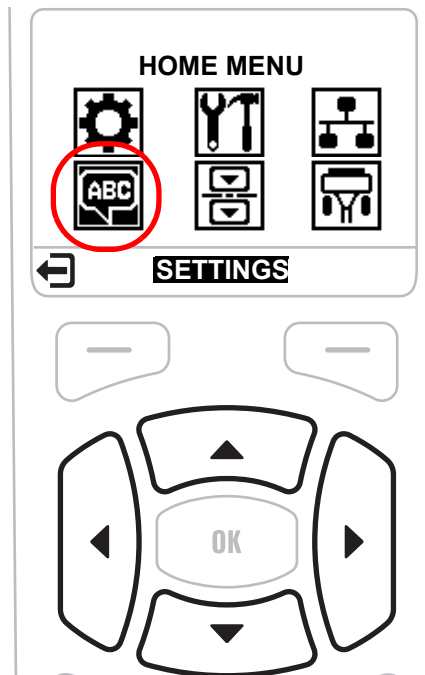


3. Press the OK button.

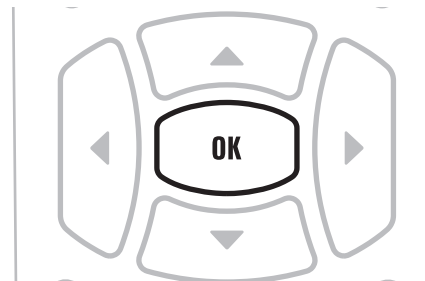


The printer displays the **LANGUAGE** selection screen.




4. Use the **LEFT** or **RIGHT ARROW** to navigate to the **VIRTUAL DEVICE** selection screen.

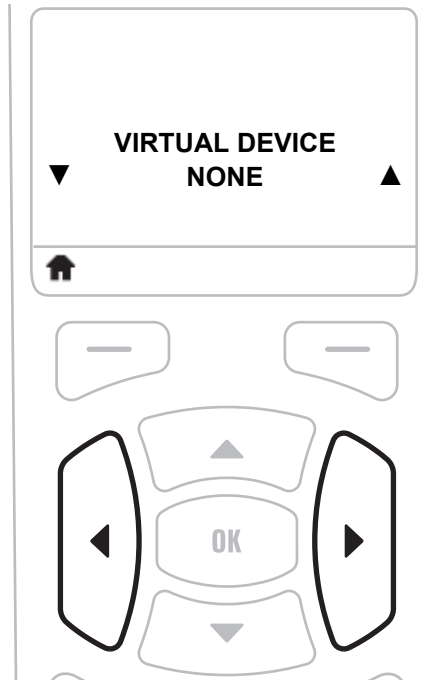

5. Use the **UP** or **DOWN ARROW** to scroll to the **APL-L** option.

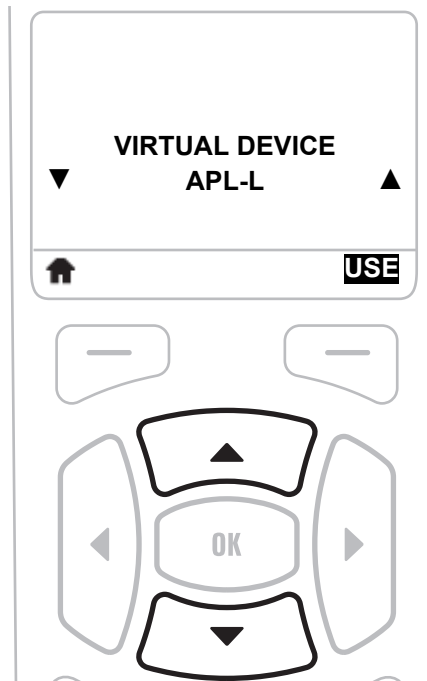

6. Press the **RIGHT SOFT KEY** or **OK** to select **USE**.

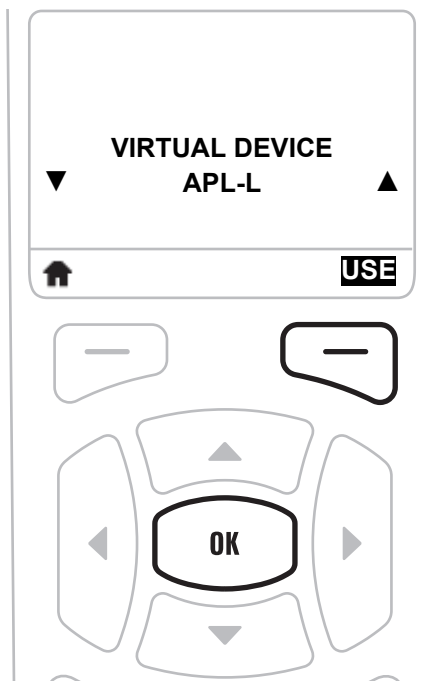

The printer restarts and uses the Virtual Device that you selected.

Commands

This section provides a listing of commands for use on your Zebra printer with the Virtual Device-L app.

Contents

Table of Supported Commands	34
Set/Get/Do (SGD) Commands	41

Table of Supported Commands

In the following commands, the parameters shown in carets < > are required while those shown in brackets [] are optional.

Syntax	Command Function	Supported (X)
Command Summary		
<i>!C</i>	Clear the label layout	X
<i>!D D S</i>	Document start	—
<i>!D D E</i>	Document end	—
<i>!D T M</i>	Turn off automatic cutter mode	—
<i>!D T A</i>	Turn on automatic cutter mode	—
<i>!D T T</i>	Execute a cut when in manual cutting mode	—
<i>!D L 0</i>	Turn off the take-label sensor	—
<i>!D L 1</i>	Turn on the take-label sensor	—
<i>!K <n></i>	Feed out n/10 mm of paper	—
<i>!L G "<name>"</i>	Load the specified graphics file	X
<i>!L M "<name>"</i>	Load the specified macro	X
<i>!L</i>	Terminate loading	X
<i>!M "<name>"</i>	Execute the specified macro	X
<i>!N<n> <v> <i> <w> <u></i>	Initialize the counters	X
<i>!P <n></i>	Print	X
<i>!p <n></i>	Dormant print (printkey mode)	—
<i>!R</i>	Clearing variable information	X
<i>!S <n></i>	Status request	X
<i>!W <n> "<data>"</i>	Changing a single variable	X

Syntax	Command Function	Supported (X)
Label Layout Definition Commands		
Format 1 <i>!F S <u> <p> <a> <h> <s> <f> [wa] <"text"></i> Format 2 <i>!F S <u> <p> <a> <h> <w> <f> [s] <"text"></i>	Scalable text field	X
<i>!F T <u> <p> <a> <h> <w> <f> <"text"></i>	Bitmap text field (deprecated)	X
<i>!F C <u> <p> <a> <h> <w> <s> [d] <"text"></i>	Defining a barcode field	X
<i>!F C <u> <p> <a> <h> <w> <o> [d] <"text"></i>	Defining a 2D barcode field	X
Format 1 <i>!F B <u> <p> <a> <h> <w> </i> Format 2 <i>!F B D <y0> <x0> <Lw> <y1> <x1></i>	Defining a line/box field	X
<i>!F G <u> <p> <a> <h> <w> <"name"></i>	Defining a graphics field	X
Service Commands		
<i>!V 9 [m]</i>	Return software revision level	X
<i>!V11</i>	Return software date	X
<i>!V12</i>	Return label count	X
<i>!V13</i>	Return available dynamic RAM (in bytes)	X
<i>!V16</i>	Return PROM number	X
<i>!V17</i>	Return total paper movement (in meters)	X
<i>!V19</i>	Return available file system memory (in bytes)	X
<i>!V20 <hh:mm:ss></i>	Set the time on the printer's clock	X
<i>!V21 <yy-mm-dd></i> or <i>!V21 <yyyy-mm-dd></i>	Set the date on the printer's clock	X
<i>!V22 [m]</i>	Return printer date and time	X
<i>!V23 <m></i>	Return the font number	X
<i>!V24 <"name"></i>	Return logo information	X
<i>!V25 <m></i>	Return information about the logo specified	X

Syntax	Command Function	Supported (X)
<i>!V26</i> <"name">	Display the content of a macro	X
<i>!V31</i>	Return the length of the last paper movement (in 1/10 mm)	X
<i>!V32</i> < <i>m</i> >	Return the current state of the specified counter	X
<i>!V33</i>	Return the number of failing dots on the printhead	X
<i>!V34</i> < <i>m</i> >	Return the position of failing dots identified by service command 33	X
<i>!V39</i>	Return the number of dormant printouts since the last <i>!p</i> < <i>n</i> > command	X
<i>!V40</i> < <i>m</i> >	Return the bitmap font number, where < <i>m</i> > is the physical number of the font, not the mapped number	X
<i>!V44</i>	Automatically set the sensitivity of the paper sensor	X
<i>!V45</i>	Set the default character spacing for all bitmap fonts	—
<i>!V48</i> < <i>m</i> >	Return information on the specified printer file system	—
<i>!V61</i> < <i>s</i> > [<i>r</i>] [<i>c</i>]	Set security level for PDF417	X
<i>!V63</i>	Return the printer serial number	X
<i>!V80</i> < <i>m</i> >	Show typeface by index < <i>m</i> >	X
<i>!V81</i> < <i>m</i> >	Show typeface by index < <i>m</i> >	—
<i>!V93</i> [<i>m</i>]	Return number of dormant printouts	—
<i>!V100</i>	Set the network IP address	X
<i>!V101</i>	Return the network IP address	X

Syntax	Command Function	Supported (X)
<i>!V102</i> <a>..<c>.<d>	Set the network IP mask	X
<i>!V103</i>	Return the network IP mask	X
<i>!V104</i> <"host">	Set the network host name	X
<i>!V105</i>	Return the network host name	X
<i>!V106</i> <"m">	Set the domain name	—
<i>!V107</i>	Return the domain name	—
<i>!V108</i> [<i>m</i>]	Return any DHCP information received from the DHCP server	X
<i>!V109</i>	Get MAC address	X
<i>!V110</i> <a>..<c>.<d>	Set the network default gateway	X
<i>!V111</i>	Return the network default gateway	X
<i>!V114</i>	Return the serial number of an RFID tag	—
<i>!V115</i>	Set a login script	—
<i>!V116</i>	Return a login script	—
<i>!V117</i>	Return the active port	X
<i>!V120</i>	Return the printer model	X
<i>!V3194</i> [<i>m</i>]	Delete specified macro, graphic, or font from the printer. If not specified, all files are deleted.	X
<i>!V3196</i>	Restart the printer	X
<i>!V3200</i>	Reset all printer parameters to their defaults	X
<i>!V3201</i>	Disconnect port	—
<i>!V3209</i> < <i>m</i> >	In Setup mode, set password for web server	—
<i>!V35183</i>	Enter User mode	—
<i>!V38153</i>	Enter Setup mode	—
Printer Configuration Commands		
<i>!Y2</i> < <i>n</i> >	Print speed	X
<i>!Y3</i> < <i>n</i> >	Barcode speed	—
<i>!Y4</i> < <i>n</i> >	Blank feed speed	—

Syntax	Command Function	Supported (X)
<i>!Y5 <n></i>	Printhead type	—
<i>!Y6</i>	Number of dots per mm of printhead	—
<i>!Y7 <n></i>	Motor steps per mm	—
<i>!Y8 <n></i>	Printhead width in dots	X
<i>!Y9 <n></i>	Dot mode	—
<i>!Y10</i>	Manufacturing date	—
<i>!Y16 <n></i>	Force DT	X
<i>!Y20 <n></i>	Photosensor threshold level	—
<i>!Y21 <n></i>	Photosensor current level	—
<i>!Y23 <n></i>	Maximum paper feed length (in 1/10 mm)	X
<i>!Y24 <n></i>	Dispensing feed (in 1/10 mm)	X
<i>!Y25 <n></i>	COM2 baud rate	—
<i>!Y26 <n></i>	COM2 parity	—
<i>!Y27 <n></i>	COM2 word length	—
<i>!Y28 <n></i>	COM2 stop bits	—
<i>!Y29 <n></i>	COM2 input buffer size	X
<i>!Y30 <n></i>	COM1 baud rate	X
<i>!Y31 <n></i>	COM1 parity	X
<i>!Y32 <n></i>	COM1 word length	X
<i>!Y33 <n></i>	COM1 stop bits	X
<i>!Y34 <n></i>	COM1 input buffer size	—
<i>!Y35 <n></i>	Character set, supported code pages	X
<i>!Y36 <n></i>	ASCII code of the command character	X
<i>!Y39 <n></i>	LTS enable	X
<i>!Y40 <n></i>	Minimum paper length to feed during a print cycle	X
<i>!Y42 <n></i>	Printing of bar code interpretation	X
<i>!Y44 <n></i>	Alternate end-of-line (EOL) character	X
<i>!Y45 <n></i>	Disable CR as end-of-line	X
<i>!Y46 <n></i>	Strobe time	—

Syntax	Command Function	Supported (X)
<i>!Y50</i> <n>	Silent mode	—
<i>!Y62</i>	Printer production year	—
<i>!Y63</i>	Printer serial number	—
<i>!Y66</i> <n>	Enable application	—
<i>!Y67</i> <n>	Printkey mode	—
<i>!Y68</i> <n>	Horizontal print position adjustment (in 1/10 mm increments)	X
<i>!Y69</i> <n>	Vertical print position adjustment (in 1/10 mm increments)	X
<i>!Y72</i> <n> to <i>!Y79</i> <n>	Map physical font to logical number	—
<i>!Y89</i> <n>	Allow command character anywhere on the line	X
<i>!Y92</i> <n>	Stacked printers mode (daisy chaining)	—
<i>!Y93</i> <n>	LTS auto repeat	—
<i>!Y100</i> <n>	Automatically reverse paper feed before printing	—
<i>!Y101</i> <n> to <i>!Y106</i> <n>	Set the intercharacter spacing for the specified bitmap font	X
<i>!Y132</i> <n>	Enable mapping of barcode information	—
<i>!Y134</i> <n>	Enable a recover page	—
<i>!Y136</i> <n>	Set PDF417 code security level	X
<i>!Y137</i> <n>	Set maximum number of columns for PDF417	X
<i>!Y138</i> <n>	Set maximum number of rows for PDF417	X
<i>!Y145</i> <n>	Set timeout value	X
<i>!Y146</i> <n>	Set line spacing, based on a percentage of the font height	X
<i>!Y150</i> <n>	COM1 communication mode	—
<i>!Y151</i> <n>	COM1 TCP port	—

Syntax	Command Function	Supported (X)
<i>!Y152 <n></i>	COM2 communication mode	—
<i>!Y153 <n></i>	COM1 TCP port	—
<i>!Y156 <n></i>	COM1 flow control	X
<i>!Y157 <n></i>	COM2 flow control	—
<i>!Y162 <n></i>	Enable reverse video mode for text fields	X
<i>!Y167 <n></i>	Set sensor type	X
<i>!Y168 <n></i>	Set historic control	—
<i>!Y170 <n></i>	Sensor detect	—
<i>!Y178 <n></i>	Set maximum label width (in 1/10 mm increments)	X
<i>!Y179 <n></i>	Set maximum label height (in 1/10 mm increments)	X
<i>!Y180 <n></i>	Specify raw data port number	X
<i>!Y185 <n></i>	Update best-before date update day	X
<i>!Y186 <n></i>	Update best-before date truncation day	X

Set/Get/Do (SGD) Commands

The following SGD commands were added for use with your Virtual Device app. For more detailed information on SGD commands, see the *Programming Guide for ZPL II[®], ZBI 2, Set/Get/Do, Mirror, and WML* (formerly the *ZPL II Programming Guide*).

apl.enable

Description This command enables or disables a Virtual Device app.



Note

- ZPL and CPCL may not function normally when a Virtual Device app is enabled.
- You must restart the printer after changing the value of `apl.enable`.

Type `setvar`

Commands	Details
<code>setvar</code>	<p>This command instructs the printer to enable a virtual device.</p> <p><i>Format:</i> <code>! U1 setvar "apl.enable" "value"</code></p> <p><i>Values:</i></p> <ul style="list-style-type: none"> <code>"apl-1"</code> = enable Virtual Device-L <code>"none"</code> = disable any Virtual Device app (ZPL and CPCL function normally)



Example 1 • This example shows how to enable the Virtual Device-L app:

```
! U1 setvar "apl.enable" "apl-1"
```



Example 2 • This example shows how to disable the Virtual Device-L app:

```
! U1 setvar "apl.enable" "none"
```

apl.version

Description This command returns the version of the currently running Virtual Device app.

Type `getvar`

Commands	Details
<code>getvar</code>	<p><i>Format:</i> <code>! U1 getvar "apl.version"</code></p>

apl.framework_version

Description This command returns the level of support for Virtual Devices in the printer operating system.

Type `getvar`

Commands	Details
<code>getvar</code>	<i>Format:</i> ! U1 <code>getvar "apl.framework_version"</code>

Supported Fonts

This section provides you with examples of the fonts available on the Zebra printers with Virtual Device-L.

Table 1 • Supported Fonts

Font	Examples	
1	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z () ~</p>	
	<p>Code Page 850</p> <p>Çüéâäåãçêëèíîïÿ ÅÆøóòóùüÿÖÜø á í ó ú ñ Ñ ½¼ Á Â Ã ã Ñ ð Ð È Ê Ë Ì Í Î Ì Ó Þ Ò Õ Ö Ø Ù Þ Þ Ú Û Ü Ý ±¾ ƒ</p>	<p>Code Page 852</p> <p>Çüéâäçêíÿ ÉóöÛ á í ó ú Á Â ð È Í Î ó þ ò ú ý ý ƒ</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ; < = > ? É A B C D E F G H I J K L M N O P Q R S T U V W X Y Z Ä \ Å Æ _ é a b c d e f g h i j k l m n o p q r s t u v w x y z ä ö å ü</p>	<p>Code Page 1143 Special</p> <p>Çüéâäåãçêëèíîïÿ ÅÆøóòóùüÿÖÜø á í ó ú ñ Ñ ½¼ Á Â Ã ã Ñ ð Ð È Ê Ë Ì Í Î Ì Ó Þ Ò Õ Ö Ø Ù Þ Þ Ú Û Ü Ý ±¾ ƒ</p>
	<p>Code Page 1252</p> <p>ƒ ° ± ² µ ¼ ½ ¾ Á Â Ã Ä Å Æ Ç È É Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö Ø Ù Ú Û Ü Ý Þ à á â ã ä å ç è é ê ë ì í î ï ð ñ ò ó ô õ ø ù ú û ü ý þ ÿ</p>	

Table 1 • Supported Fonts (Continued)

Font	Examples	
2	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ;<=>?@ABCDEFGH IJKLMNOPQRST UVWXYZ[\]^_`ab cdefghijklmno pqrstuvwxyz { } ~</p>	
	<p>Code Page 850</p> <p>ÇüéâãäåçêëèìíîË ÅÉæÆðöòùÿÖÜøØ áíóúñÑ ½¼ ÁÂÀ ãÃ ðÐÊËËËËËËË ìóβÔÒòðÕμρⓅ ÚÛÜÿÝ ¾</p>	<p>Code Page 852</p> <p>ÇüéâãäçêîË ÉôöÛ áíóú ÁÂ ÐËËË óβÔ ÚÿÝ</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ;<=>?ÉABCDEFH IJKLMNOPQRST UVWXYZÄ\ÅÜ_éab cdefghijklmno pqrstuvwxyz äöåü</p>	<p>Code Page 1143 Special</p> <p>ÇüéâãäåçêëèìíîË ÅÉæÆðöòùÿÖÜøØ áíóúñÑ ½¼ ÁÂÀ ãÃ ðÐÊËËËËËËË ìóβÔÒòðÕμρⓅ ÚÛÜÿÝ ¾</p>

Table 1 • Supported Fonts (Continued)

Font	Examples
2	<p data-bbox="297 310 506 338">Code Page 1252</p> <p data-bbox="297 363 665 600"> ^{◦2} μ ¼½¾ ÀÁÂÃÄÅÆÇÈÉÊ ËÌÍÎÏÐÑÒÓÔÕÖ ØÙ ÚÛÜÝÞßàáâãäåæçè éêëìíîïðñóôõö øùúûüÿÿ </p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
3	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ;<=>?@ABCDEFGH IJKLMNOPQRST UVWXYZ[\]^_`ab cdefghijklmno pqrstuvwxyz { }~</p>	
	<p>Code Page 850</p> <p>Çüéáàâãäåçèéëìíîÿ ĂĂÉæŒöøðóüÿÖÜøØ áíóúñÑ ½¼ ÁÂÃ ãÄ ðÐÉÊËÌÍÎ ìóβòðððμρP ÚÛÜÿÝ ±¾ S</p>	<p>Code Page 852</p> <p>Çüéáàçèíÿ ÉóöÜ áíóú ÁÂ ÐËÍÎ óβó ÚÿÝ S</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789: ;<=>?ÉABCDEFHG HIJKLMNOPQRST UVWXYZĂ\ĂÛ_éab cdefghijklmno pqrstuvwxyz äöäü</p>	<p>Code Page 1143 Special</p> <p>Çüéáàâãäåçèéëìíîÿ ĂĂÉæŒöøðóüÿÖÜøØ áíóúñÑ ½¼ ÁÂÃ ãÄ ðÐÉÊËÌÍÎ ìóβòðððμρP ÚÛÜÿÝ ±¾ S</p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
5	<p>Standard</p> <p>! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~</p>	
	<p>Code Page 850</p> <p>Ç ü é â ä å ç è é ê ì î ï Ñ Æ É æ œ ô õ ö ù ü Ÿ Ö Ü ø Ø á í ó ú ñ Ñ ½ ¼ Á Â Ã ã ã ð Ð Ê Ë È Í Î Ï Ì Ó ß Ô Õ ö ÷ μ ρ ϑ Ú Û Ü Ÿ Ý ¾ §</p>	<p>Code Page 852</p> <p>Ç ü é â ä ç è ê ì Ñ É ó ö Ü á í ó ú Á Â Ð È Í Î Ó ß Ô Ú Ÿ Ý §</p>
	<p>Code Page 1143 Standard</p> <p>! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? É A B C D E F G H I J K L M N O P Q R S T U V W X Y Z Ä \ Å Û _ é a b c d e f g h i j k l m n o p q r s t u v w x y z ä ö å ü</p>	<p>Code Page 1143 Special</p> <p>Ç ü é â ä å ç è é ê ì î ï Ñ Æ É æ œ ô õ ö ù ü Ÿ Ö Ü ø Ø á í ó ú ñ Ñ ½ ¼ Á Â Ã ã ã ð Ð Ê Ë È Í Î Ï Ì Ó ß Ô Õ ö ÷ μ ρ ϑ Ú Û Ü Ÿ Ý ¾ §</p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
6	<p>Standard</p> <p>!"#\$%&'()*+,-./ 0123456789:;<=>? @ABCDEFGHIJKLMNO PQRSTUVWXYZ[\]^_ 'abcdefghijklmno pqrstuvwxyz{ }~</p>	
	<p>Code Page 850</p> <p>ÇüéâãäåçèéëìíîË ÁÉæÆôöòùÿÖÜøØ áíóúñÑ ½¼ ÁÂÀ ãÃ øÐÊËËÍÏ ìóβÔòõμρP ÚÛÜÿÝ ¾</p>	<p>Code Page 852</p> <p>ÇüéâãçèîË ÉóöÜ áíóú ÁÂ ÐÉÍ óβÔ ÚÿÝ</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,-./ 0123456789:;<=>? ÉABCDEFGHIJKLMNO PQRSTUVWXYZÄ\ÅÜ éabcdefghijklmno pqrstuvwxyzäöåü</p>	<p>Code Page 1143 Special</p> <p>ÇüéâãäåçèéëìíîË ÁÉæÆôöòùÿÖÜøØ áíóúñÑ ½¼ ÁÂÀ ãÃ øÐÊËËÍÏ ìóβÔòõμρP ÚÛÜÿÝ ¾</p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
24455	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>@ABCDEFGH IJKLMNOPQRST UVWXYZ[\]^_`ab cdefghijklmno pqrstuvwxyz { } ~</p>	<p>Code Page 850</p> <p>Çüéâääâçêèèï ìÄÅÉæÆôöòùÿÖ ÛøƒØ ×fáíóúñÑ^a °¿® −½¼¡«» ÁÂÀ© çŸ ãÃ ∂ðÐÊËÈÍÎÏ ÏÓÔÕöõÕµþ ÞÚÛÜýÝ´´-±¾¶ § ÷, °, 132</p>
	<p>Code Page 852</p> <p>ÇüéâäüçłëŒōî ŽĂĆÉĹíôöĹıŚśŒ ŮřłŁ ×čáíóúĄąŻ žĚę −żĆş«» ÁÂĚŞŽž Ăă ∂ðÐĎĚďŇĬĚ ŤŮÓÔŇňŃšš ŘŮřŮýÝť´´-˘˘ § ÷, °, 132 ůŘř</p>	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>ÉABCDEFH IJKLMNOPQRST UVWXYZÄ\ÀÜ_éab cdefghijklmno pqrstuvwxyz äöäü</p>
	<p>Code Page 1143 Special</p> <p>Çüéâääâçêèèï ìÄÅÉæÆôöòùÿÖ ÛøƒØ ×fáíóúñÑ^a °¿® −½¼¡«» ÁÂÀ© çŸ ãÃ ∂ðÐÊËÈÍÎÏ ÏÓÔÕöõÕµþ ÞÚÛÜýÝ´´-±¾¶ § ÷, °, 132</p>	<p>Code Page 1152</p> <p>€ , f „ … † ‡ ^ % o Š Ÿ Ć ‘ ’ “ ” • _ ~ ™ š œ Ÿ ĵ ç ƒ ∞ Ÿ § • © ª « ¬ ® ¯ ° ± ² ³ ´ µ ¶ · ¸ ¹ º » ¼ ½ ¾ ¿ À Á Â Ã Ä Å Æ Ç È É Ê Ë Ì Í Î Ï Ñ Ò Ó Ô Õ Ö × Ø Ù Ú Û Ü Ý Þ ß à á â ã ä å æ ç è é ê ë ì í î ï ð ñ ò ó ô õ ÷ ø ù ú û ý þ ÿ</p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
94021	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>?@ABCDEFGH IJKLMNOPQRST UVWXYZ[\]^_`ab cdefghijklmno pqrstuvwxyz { }~</p>	
	<p>Code Page 850</p> <p>Çüéâäåâçêëèï ìÿÀÉæÆôöòùÿÖ ÛøŁØ × f áíóúñÑ^a °¿®¬½¼¡«» ÁÂÀ©ç¥ ãÃ ðÐÊËÈÍÎÏ ìóβòòõöμþ ƒúúÛýÝ´´±¾¶ § ÷ , ° ° ° .132</p>	<p>Code Page 852</p> <p>ÇüéâäåâçêëÖøï ŽĂĆÉÍíóöŁÍŚśÖ ŮřŁ × čáíóúĄąŻ žĘę¬žČš«» ÁÂĚŠŽž Ăă ðđĎĚďŇňíě ŤŮÓβŌŇňňŠš ŔŮřŮýÝť´´±¾¶ § ÷ , ° ° ° ´ ůŘř</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>?ÉABCDEFH IJKLMNOPQRST UVWXYZÄ ÅÜ_éab cdefghijklmno pqrstuvwxyz äöåü</p>	<p>Code Page 1143 Special</p> <p>Çüéâäåâçêëèï ìÿÀÉæÆôöòùÿÖ ÛøŁØ × f áíóúñÑ^a °¿®¬½¼¡«» ÁÂÀ©ç¥ ãÃ ðÐÊËÈÍÎÏ ìóβòòõöμþ ƒúúÛýÝ´´±¾¶ § ÷ , ° ° ° .132</p>

Table 1 • Supported Fonts (Continued)

Font	Examples	
94023	<p>Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>?@ABCDEFGH IJKLMNOPQRST UVWXYZ[\]^_`ab cdefghijklmno pqrstuvwxyz { }~</p>	
	<p>Code Page 850</p> <p>Çüéáääâçêëèïï ìĀĀÉæÆðöòùÿÖ ÛøƒØ × f áíóúñÑ^a °¿®¬½¼ «» ÁÂÀ©ç¥ ãÃ αδÐÊËÈÍĪĬ Í Ó Β Ò ð ò Ñ μ ρ ρ Ú Û Ü ý Ý ¯ ´ ± ¾ ¶ § ÷ , ° ° ° ° .132</p>	<p>Code Page 852</p> <p>ÇüéáääûçłëÕõİ ŽĂĆÉĹÍðöĹÍŚśŎ ÛŤŧŁ × čáíóúĀąŽ žĘę ¬ žČš«» ÁÂĚŞŽž Ăă αδÐĎĚďŃĬĚ ŤŮÓΒŎŃňŇŠš ŔŮŔŮŮýŸŧ´´´´´´´´ § ÷ , ° ° ° ° ůŘř</p>
	<p>Code Page 1143 Standard</p> <p>!"#\$%&'()*+,- ./0123456789:;< =>?ÉABCDEFH IJKLMNOPQRST UVWXYZÄ\ÅÜ_éab cdefghijklmno pqrstuvwxyz äöåü</p>	<p>Code Page 1143 Special</p> <p>Çüéáääâçêëèïï ìĀĀÉæÆðöòùÿÖ ÛøƒØ × f áíóúñÑ^a °¿®¬½¼ «» ÁÂÀ©ç¥ ãÃ αδÐÊËÈÍĪĬ Í Ó Β Ò ð ò Ñ μ ρ ρ Ú Û Ü ý Ý ¯ ´ ± ¾ ¶ § ÷ , ° ° ° ° .132</p>

ZDownloader Utility

This section provides you with the instructions for downloading and installing the ZDownloader Utility.

Contents

Downloading the ZDownloader Utility	56
Installing the ZDownloader Utility	57

Downloading the ZDownloader Utility

To download the ZDownloader Utility, perform the following from your computer:

1. Open a web browser and navigate to www.zebra.com.
2. Click on the **Support & Downloads** header on the webpage.
3. Select a printer.
4. When the printer page opens, locate and select the **Software Utilities** tab.
5. Scroll down to the ZDownloader Utility and select the **Download** link.



Note • You will be prompted to create a user profile or login to www.zebra.com with an existing profile to download the ZDownloader Utility.


6. Click on the **Accept and Begin Download Now** button.
The installation file download will begin.

Installing the ZDownloader Utility

To install the ZDownloader Utility, perform the following from your computer:


1. Run the installation file after the download is complete.
2. If you are prompted to allow the application to make changes to your computer, click **Yes**.

The utility installs on your computer. When installation is complete, the Firmware Downloader and ZBI Key Manager installation wizard appears.

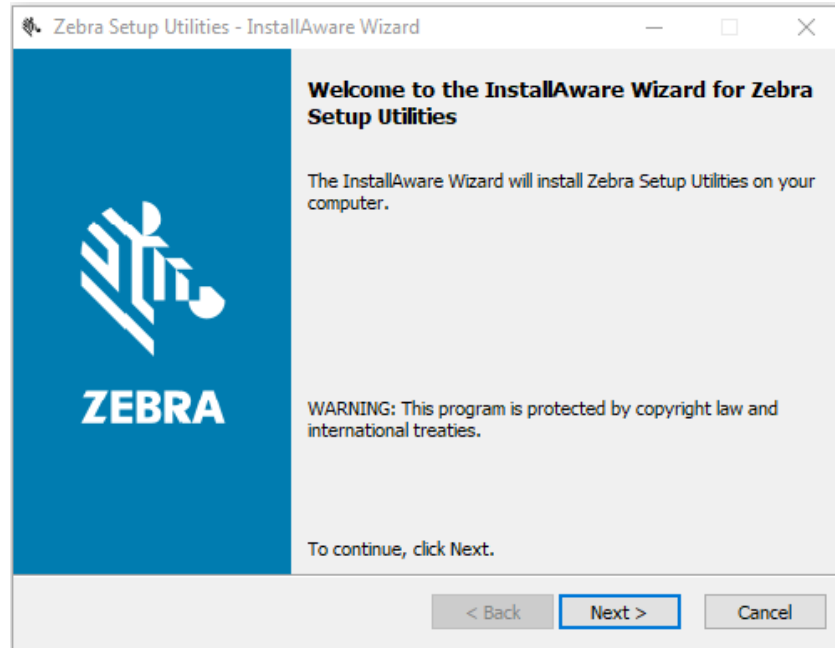

3. Click **Next**.
The End User License Agreement appears.

4. Read the terms of the agreement.

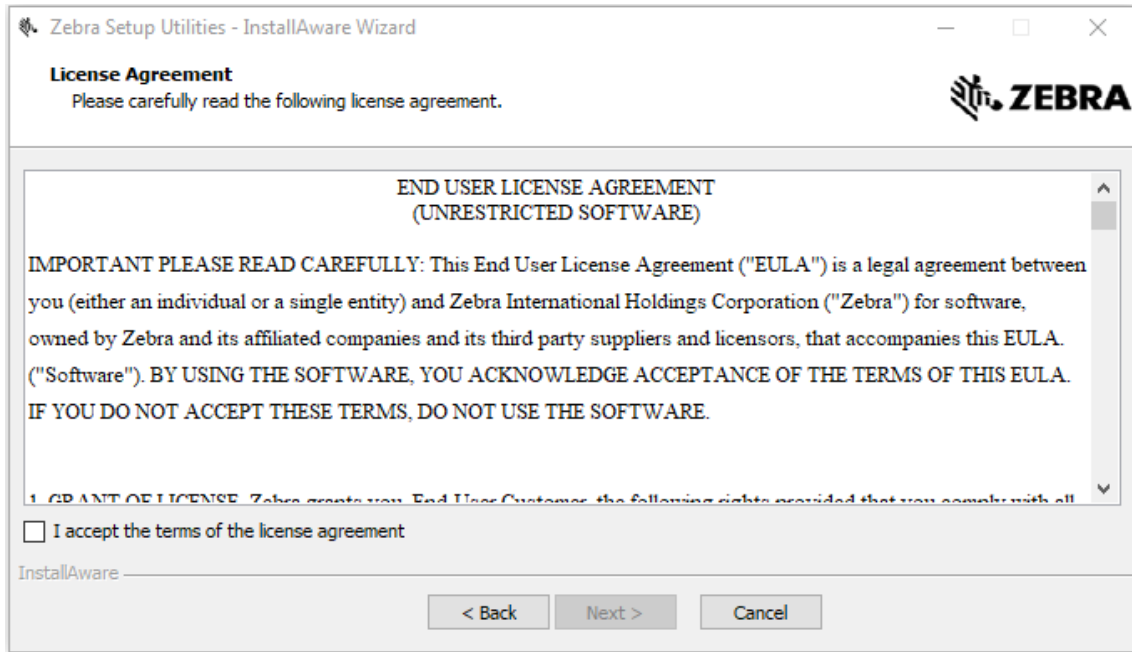


5. Click the **checkbox** to accept the terms.

6. Click **Next**.


7. Click **Next**.

The installation wizard displays information about the installation.

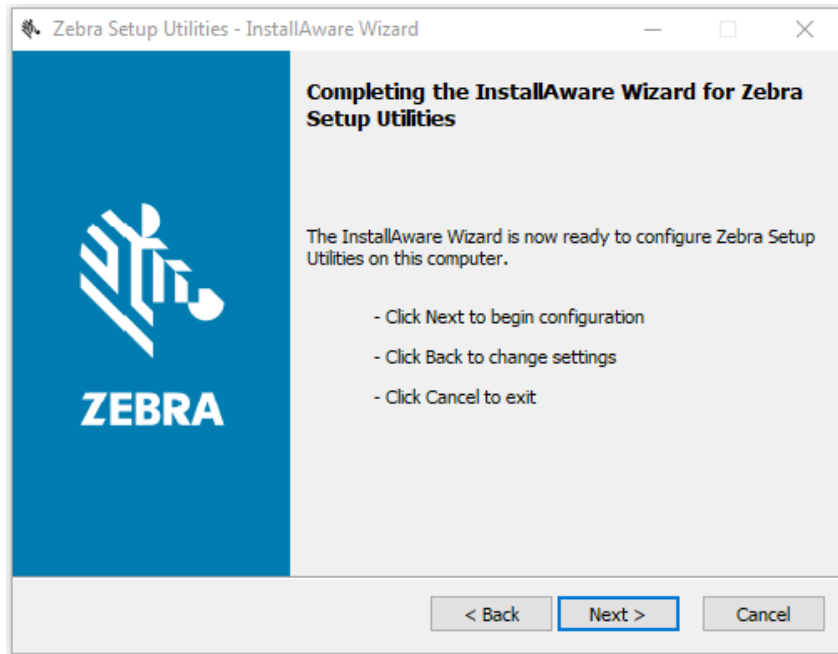

8. Click **Next**.

The installation wizard installs the application.

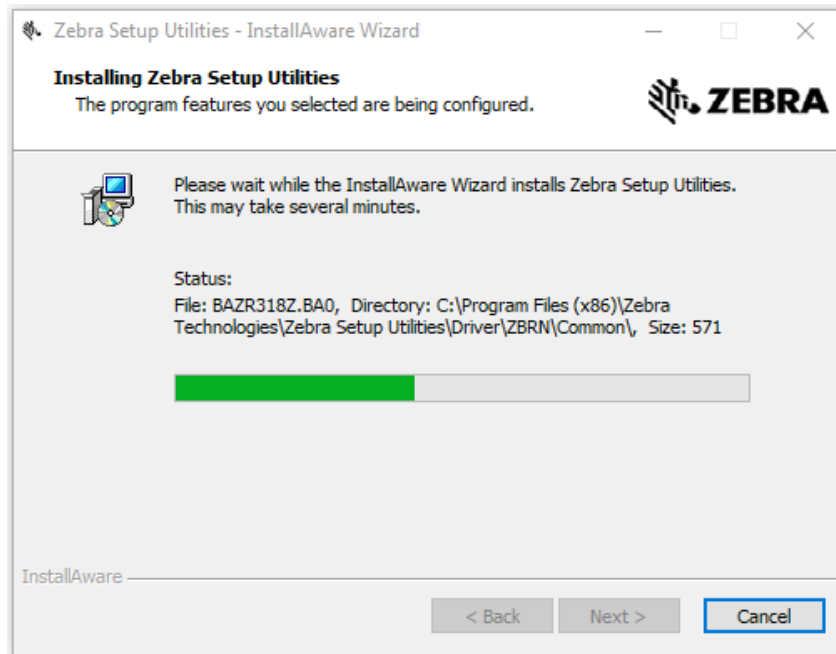

9. Click **Finish** to close the wizard.



Index

Symbols

(Continued), 44

A

application installation
 acquiring the app, 10
 canceling a download in progress, 20
 downloading the app to printers, 18
auto-detect printers, 12

C

commands and command parameters, 34
connectivity options, 7

D

disabling the Virtual Device
 by apl.enable SGD command, 41
 through the control panel
 QLn320 and QLn220 printers, 26
 QLn420 printers, 23
 ZT230, ZT400 series, ZT510, ZT600 series, ZD500 series, and ZD600 series printers, 29
ways to enable/disable, 22

E

enabling the Virtual Device
 by apl.enable SGD command, 41
 through the control panel
 QLn320 and QLn220 printers, 26
 QLn420 printers, 23
 ZT230, ZT400 series, ZT510, ZT600 series, ZD500 series, and ZD600 series printers, 29
ways to enable/disable, 22

ways to enable/disable, 22
ries, ZD500 series, and ZD600 series printers, 29
ways to enable/disable, 22

F

features, 6
fonts, 43

I

IP Ethernet printers
 auto-detect, 12
 manually add, 13

L

liability, 2

M

manually add printers, 13
modifying printer communication settings
 through ZDownloader, 16

P

parallel printers, 13
print servers, 7

S

serial interface
 add printers, 13
Set/Get/Do (SGD) commands, 41
supported fonts, 43

U

USB printers, 12

V

version

level of support for Virtual Devices, 42

of Virtual Device, 41

Virtual Device version, 41

W

wired print server

auto detect, 12

for more information, 7

manually add, 13

wireless print server

auto detect, 12

for more information, 7

manually add, 13

Z

ZDownloader

adding printers, 11

canceling a download in progress, 20

deleting printers, 17

downloading the Virtual Device app to printers,
18

downloading ZDownloader, 56

installing ZDownloader, 57

modifying printer settings, 16

zebra printer setup utility for android devices, 11



Corporate Headquarters

Zebra Technologies Corporation
3 Overlook Point
Lincolnshire, IL 60069 USA
T: +1 847 634 6700
Toll-free +1 866 230 9494
F: +1 847 913 8766

<http://www.zebra.com>